



Mic. On/Off


- Press the power button to turn on the microphone, the PWR indicator will light and indicate the current battery status:

Battery status	Indicator
Full	Green on
Enough	Yellow on
Low	Red on

- Keep pressing the power button for 2 seconds to turn off the microphone
- Use TES-ADP5V for charging when battery is low (charging time < 2.5 hours)
- Operation duration is more than 6 hours

Fitting the microphone

- Put the hanging piece into the slot and fix the hole to the locating pin, adjust the looped part of the neck lanyard to find a suitable position (about 15 cm from the mouth)

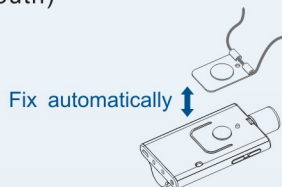

Remote volume control

- Press the selector button to select a signal source and its indicator will light
- Adjust the volume by pressing "▲/▼". The volume will be increased/ decreased by 1 dB for each press until it reaches the limit

Frequency channel selection

- Keep pressing the selector and power button for more than 2 s, the 4 signal indicators (CHG/OWN/OTR/LINE) will light one after another twice
- Select a frequency channel by pressing "▲/▼". The number of lighted signal indicators indicates the frequency channel:

1 indicator	1.0 MHz
2 indicators	1.67 MHz
3 indicators	2.33 MHz
4 indicators	3.0 MHz

- Press the power button to save and the microphone will reboot automatically

OWN/AUDIO IN muting

- Press the power/mute button to enable (OWN indicator blinks) or disable OWN mute function

Auxiliary audio input

- Auxiliary audio input for devices like Mp3 and mobile phone. The microphone will mute automatically once a Ø 3.5 mm mini-plug is plugged in
- Press and hold the function button to switch the input audio source, the LINE indicator indicates the source:



LINE indicator	Input source
Green	MIC IN
Red	LINE IN